
## FRAME AND CONSOLE PARTS

Whirlpool


For Model: DU800DWGX1
Black

UNDERCOUNTER DISHWASHER

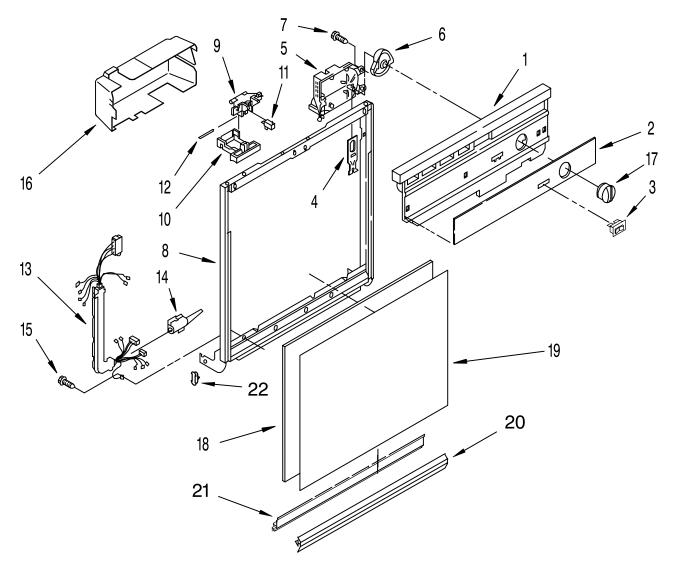


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8051465	Console	11	3369325	Switch, (2)	19		+Front Panel
		(Includes Item 2)	12		Pin, Switch (2)	'	3369769	(Black/White)
2	8051321	Ìnsert, Console	13		Harness and	20		Retainer, Panel
3	8051729	Switch, Rocker			Protector	21	3374716	Channel, Retainer
4	3369529	Follower, Cam	14	3376405	Elbow, Harness			(Also Order Item
5	3373590	Timer	15	3400803	Screw			¥20)
6	3375140	Cam	16	8051644	Cover Timer	22	3373234	Bearing,
7	304231	Screw	17		Knob, Timer			Spring (2)
8	3374711	Door Frame		3375348	Black			,
		(Includes Item 21)		3375349	White			
9	3380854	Bolt, Latch	18	3368979	Spacer,	+R	efer To Dis	shwasher
10	3369457	Lever, Latch			Corrugated		placement	ist No. 678345

## **INNER DOOR PARTS**

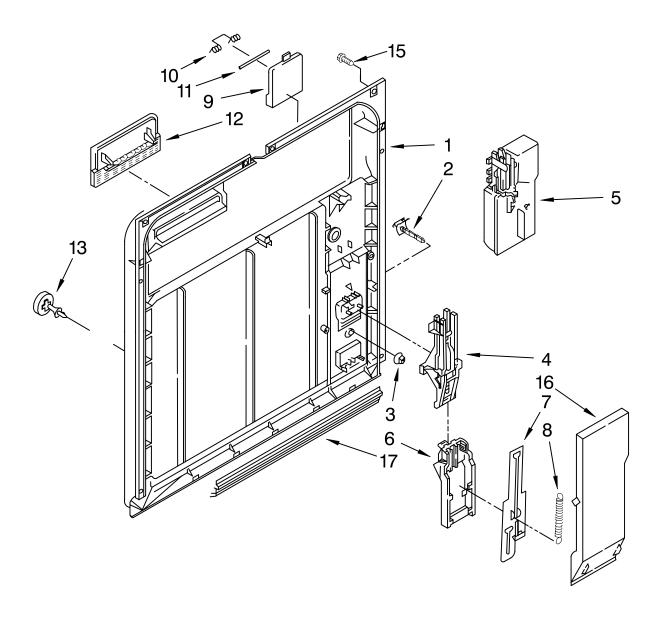

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3369054	Inner Door	5	8052027	Wet Agent,	10	300106	Spring, Lid
'	0000004	(Also Order Latch		0002021	Dispenser	111		Pin (Lid Hinge)
		Door Kit 676413)	6	3369000	Draw Bar (Upper	12		Screen, Vent
2	3376066	Latch, Detergent			Dispenser)	13	3378134	Cap, Wet-Agent
		Dispenser	7	3369602	Draw Bar (Lower	15	3400815	Screw
3	3369061	Snap, Detergent			Dispenser)	16	3371569	Cover, Drip
		Dispenser	8	3368999	Spring (Draw	17	3369479	Spatter Shield
4	3369055	Actuator Assembly			Bar)			
		•	9	3378138	Lid Assembly			

## **TUB ASSEMBLY PARTS**

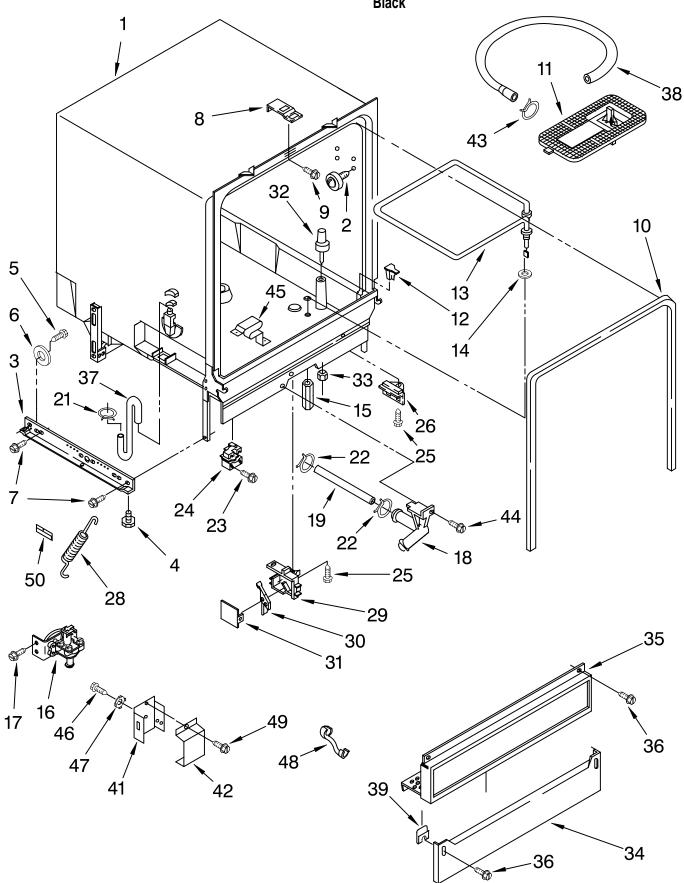


## **TUB ASSEMBLY PARTS**

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3378159	Tub Assembly	17	304392	Screw	34	3368942	Toe, Panel
2	3380371	Tub, Wheel Assembly (8)	18	3369421	Check, Valve Assembly	35		Access Panel & Clip Assembly
3	3368933	Runner (2)	19	3369180	Hose, Coupler			(Includes Item 39)
4	3376439	Leveler (2)	21	301958	Clamp	36	302868	Screw
5	3370389	Screw, Shoulder	22	371499	Clamp	37	3369414	Hose, Inlet
6	302819	Wheel (2)	23	3370225	Screw	38	3368781	Drain Hose
7	343641	Screw `´	24	3369063	Relay	39	3378123	Clip, Grounding
8	3378149	Plate, Latch	25	304231	Screw	41		Terminal Box
9	3374720		26	3368928	Fuse, Thermal	42	300068	Cover Assembly,
10	3376927	Gasket	28	3373228	Spring, Door (2)			Terminal Box
11	3369322	Grate	29		Housing, Float	43	356138	Hose Clamp
12	3378140	Deflector (2)			Switch	44	359625	Screw
13	3379269	Heater	30	3369067	Switch, Float	45	3379740	Support, Heater
		(Includes Item 14)	31	3369049	Cover, Switch	46	3400014	
14	717273	Washer, Rubber (2)			Housing	47	3378128	Washer
15	3378706		32	3369072	Float	48		Strain Relief
_		(Heater Terminal)	33	717488	Nut	49	3369138	Screw
16	3378779					50	8052018	Friction Pad (Velcro)


#### **PUMP AND SPRAY ARM PARTS**

For Model: DU800DWGX1
Black

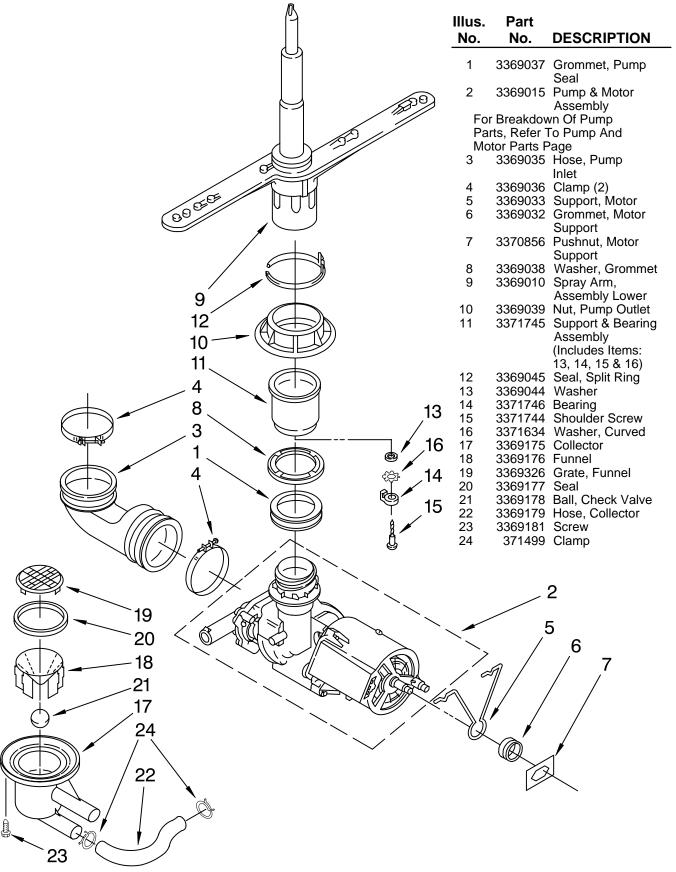


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

## **PUMP AND MOTOR PARTS**

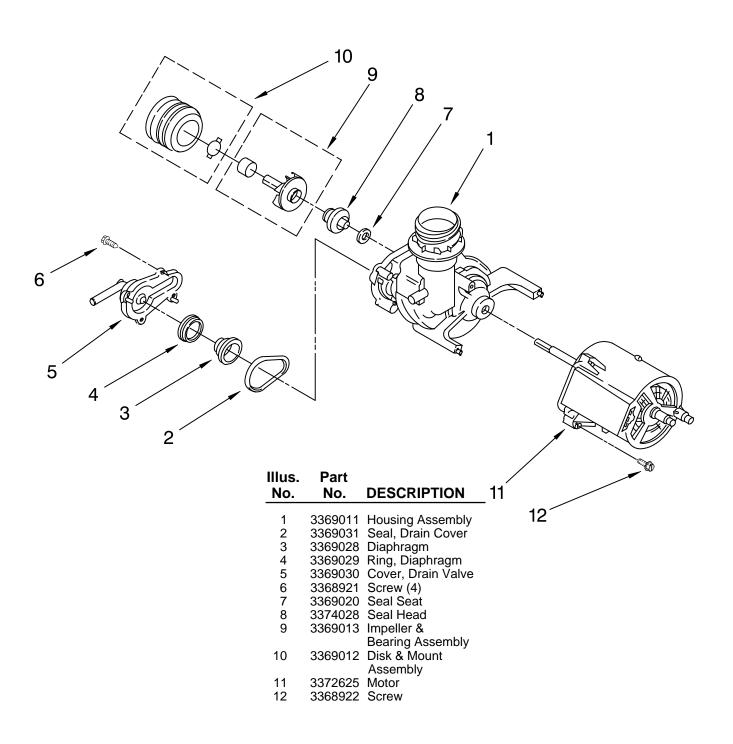


#### **DISHRACK PARTS**

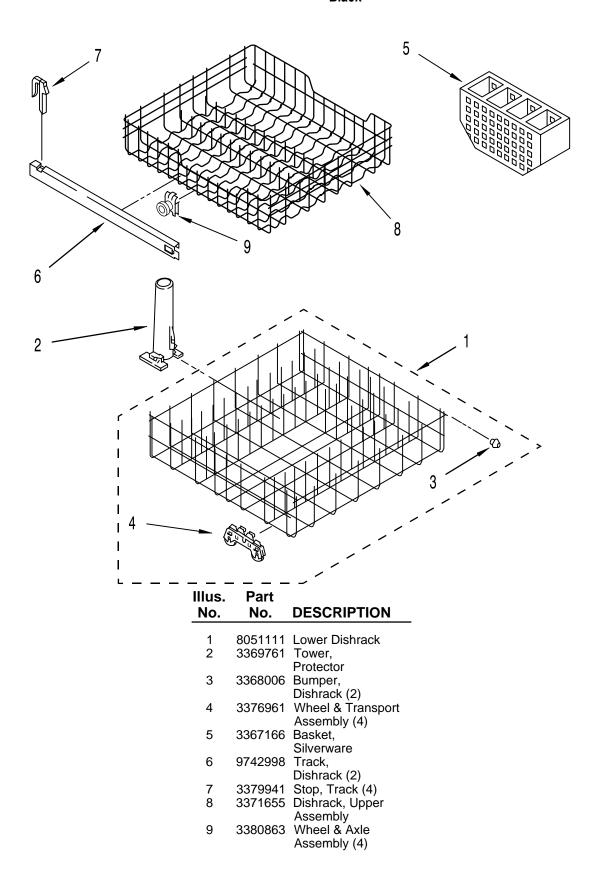

# MISCELLANEOUS PARTS For Model: DU800DWGX1

Black



Illus. No.	Part No.	DESCRIPTION					
		-					

3369816 Miscellaneous Parts Bag (Includes 2 Screws & 2 Hose Clamps)

### LITERATURE AND OPTIONAL PARTS

Illus. Part No. No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
PAINT, TOUCH	OPTIONAL PARTS NOT INCLUDED						
72017 72107 72032 PAINT, PRESS (13 oz.) 350956 285006 350942 PAINT, TOUC	White Almond		675576 675677 676453 675679	Vinyl Touch–Up (Blue) Tine Tip Repair Kit (Blue— Enough For Two Complete Dishracks) Vinyl Touch–Up (White) Tine Tip Repair Kit (White— Enough For Two Complete Dishracks) Vinyl Touch–Up (Grey) Tine Tip Repair Kit (Grey— Enough For Two Complete Dishracks)	LITE	4317925 4317929 4318050 <b>RATURE</b> LIT8051229 LIT3367007	Y PARTS  White Almond  Heavy Duty  PARTS  Instructions, Installation Instructions, Installation (Supplement) (Locating Your Water Supply) Energy Guide Guide, Use & Care Wiring Diagram